3 x 3M Straight Leg Canopy & Full Windwall
INSTRUCTION MANUEL

Canopy Assemble:

1

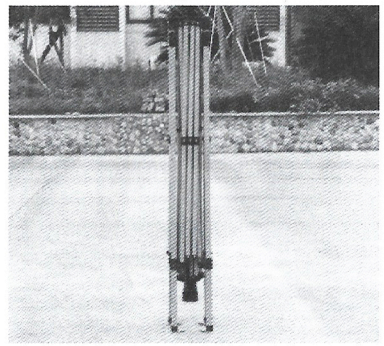

take out the frame from the carrybag and make the frame stand on a flat ground.

2

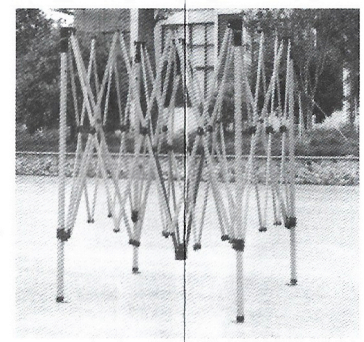

hold 2 legs on the same side, take a few steps back to unfold the frame.

3

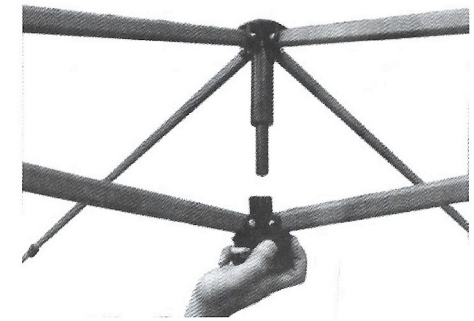

push the lock mechanism up to extend the frame fully.

4

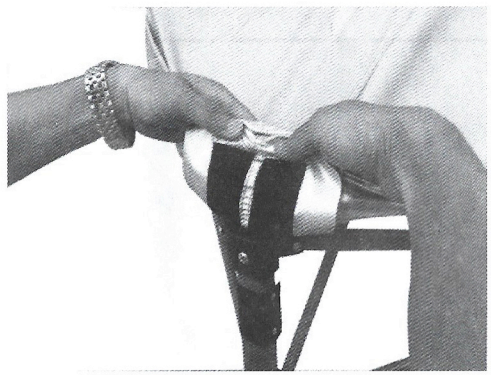

place the canopy top over the frame and strap the hook and loop straps to secure all corners on the frame.

5

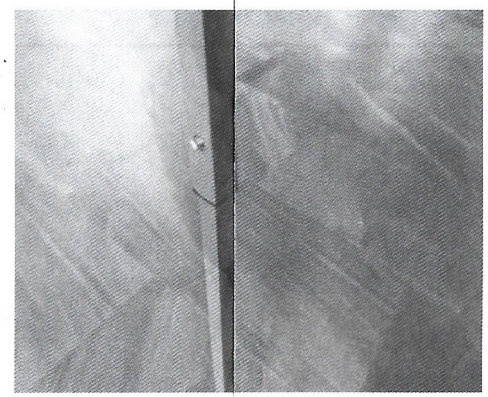

extend all the fours legs to the desired height.This should complete by pull the two legs on the same side at the same time.The canoy will lock into place after all four legs extend to the desired height.

6

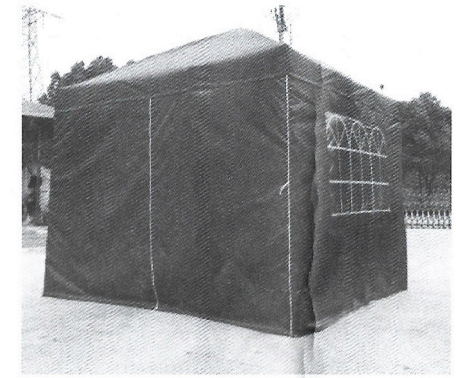

Connect the wind walls together with the canopy top piece by piece through the hook and loop straps on the top of the wind walls. Zip each wind wall together by the zipper. Next secure all the loop straps around the legs.

3 x 3 Straight Leg Canopy & Full Windwall
INSTRUCTION MANUEL

Canopy Disassemble:

1

Release all the zippers near four legs. Unhooking all the hook straps both on the top of the wind wall and around the legs. Then carefully fold the wind wall piece by piece

2

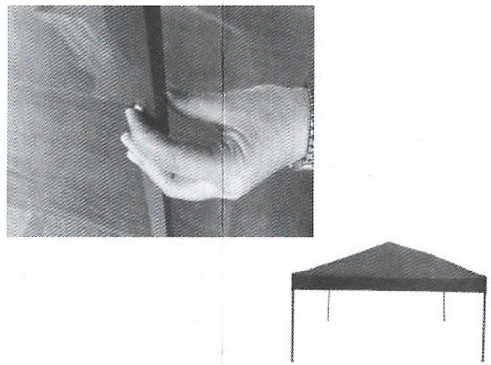

Lower the canopy by pressing the release button on each leg.

3

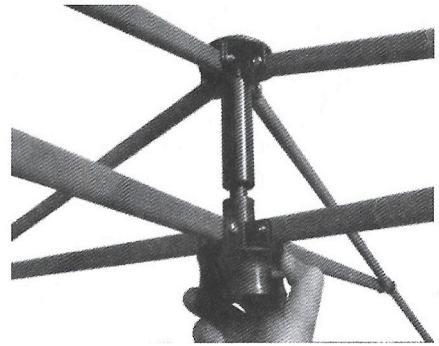

Pull the central lock mechanism down after press down the white button.

4

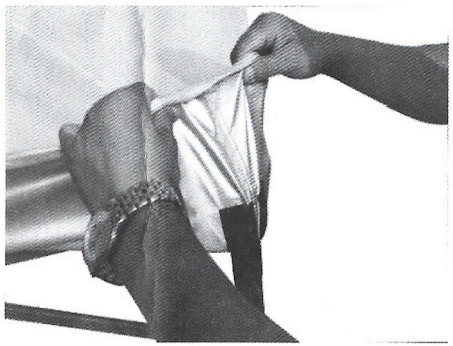

unstrap the hook and loop straps on the four corners from the frame. Remove and fold the canopy top up. Make sure the canopy is dry.

5

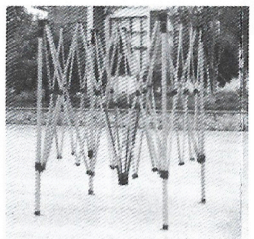

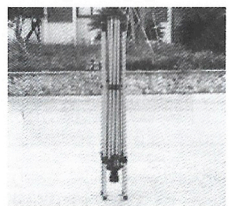

take a few steps forward to fold up the frame.

6

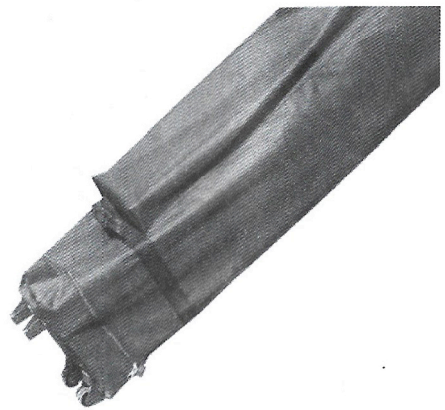

place the canopy top, full windwall and frame into the carrybag

Replacement parts | Pièces de rechange

Guide Part Name

A	Dome cap
B	Truss cap
C	Inner leg
D	Food pad
E	Joint bolt/nut/washer & bolt cap
F	2 Way outer leg bracket
G	2 Way outer leg slider bracket
H	Truss bar
I	Center lock
J	Inner leg height adjuster
L	Outer Leg W/Velcro